

Push-Pullers®

927 10-Ton Capacity Can be used with No. 1123 bearing pulling attachment or No. 679 pulley pulling attachment. May also be used with Nos. 1150, 1151, 1152, or 1153 internal pulling attachments.

938 17-1/2 Ton Capacity Can be used with Nos. 1124 and 1130 bearing pulling attachments or Nos. 679 and 680 pulley pulling attachments. May also be used with Nos. 1150, 1151, 1153, 1165, or 1166 internal pulling attachments.

939 30-Ton Capacity Can be used with Nos. 1126 and 1127 bearing pulling attachments or No. 680 pulley pulling attachment (two 8012 adapters are required to connect 680 to puller). Can be used with No. 1165 internal pulling attachment.

Push-Pullers® Leg Extensions

Tool No.	Max. Reach	Max. Spread	Screw Size	Notes / Weight
927	8-1/4"	2-1/8" - 7-1/4"	3/4"-16 x 12"	1/2" of forcing screw tip end is threaded 5/8"-18. No. 1100 legs and No. 24827 leg ends included. Wt., 7 lbs.

Extra Legs (pair) for No. 927 Push-Puller (Reach equals leg length plus 1-1/2" with leg end caps.

Tool No.	Leg Len	gth & Wt.	Tool No.	Leg Length & Wt.
1103	4-3/4" 1 lb.	6	1102	11-3/4" 2 lbs., 4 oz.
1100	6-3/4" 1 lb., 8 oz.		1101	15-3/4" 3 lbs., 4 oz.
Tool No.	Max. Reach	Max. Spread	Screw Size	Notes / Weight
938	11-1/2"	3-1/8" - 11- 3/4"	1"-14 x 13- 1/4"	Leg ends threaded 5/8"–18. No. 1106 legs and No. 24827 leg ends included. Wt., 20 lbs., 12 oz.

Extra Legs (pair) for No. 938 Push-Puller (Reach equals leg length plus 2" with leg end caps.)


Tool No.	Leg Length & Wt.	Tool No.	Leg Length & Wt.
1107	4-1/2" 2 lbs., 8 oz.	1105	22-1/2" 9 lbs.
1106	9-1/2" 4 lbs., 8 oz.	1108	30" 11.5 lbs.
1104	16-1/2" 6 lbs., 8 oz.		=

To No	ol Max. b. Reach	Max. Spread	Screw Size	Notes / Weight
93	10-1/2	7"-16-1/4"	1-1/2"-12 x 17-1/4"	Leg ends threaded 1"–14. No. 1109 legs and No. 28390 leg ends included. Wt., 44 lbs.

Extra Legs (pair) for No. 939 Push-Puller (Reach equals leg length plus 2" with leg end caps.)

Tool No.	Leg Length & Wt.	Tool No.	Leg Length & Wt.
1109	8" 8 lbs.	1111	28" 22 lbs.
1110	18" 15 lbs.		



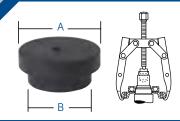

Tool No.		Set No.	Dia. "A"	Dia. "B"
8057	•	•	1"	3/4"
8058	•	•	1-1/8"	7/8"
8059	•	•	1-1/4"	1"
8060	•	•	1-3/8"	1-1/8"
8061	•	•	1-5/8"	1-1/4"
8062	•	•	1-3/4"	1-3/8"
8063		•	1-7/8"	1-1/2"
8064		•	2"	1-5/8"
8065		•	2-1/8"	1-3/4"


Metric and standard External-Internal Threaded Adapters For use on the ends of Push-Puller legs or forcing screws when

pulling shafts, bearing caps, pinions, etc.

8074, 8076 & 8075 **Step Plate Adapter Sets**

Necessary for pulling and installing bearings, gears, or other parts found on hollow shafts or housings. They may be used with Grip-O-Matic® pullers and Push-Pullers®, as well as shop presses. All adapters are available separately.

Tool No.	8074	Set No. 8075	8076	Dia. "A"	Dia. "B"
8066		•		2-3/8"	1-7/8"
8067		•		2-1/2"	2"
8068			•	2-5/8"	2-1/8"
8069			•	2-3/4"	2-1/4"
8070			•	2-7/8"	2-3/8"
8071			•	3"	2-1/2"
8072			•	3-1/4"	2-3/4"
8073			•	3-1/2"	3"

 

Tool No.	Internal End	External End	Length
Metric 1	hreaded Ada	pters	
8111	5/8"-18	M6 x 1.0	2-1/4"
8112	5/8"-18	M8 x 1.0	2-1/4"
8113	5/8"-18	M8 x 1.25	2-1/4"
8114	5/8"-18	M10 x 1.25	2-1/4"
8115	5/8"-18	M10 x 1.5	2-1/4"
8116	5/8"-18	M12 x 1.25	2-1/4"
8117	5/8"-18	M12 x 1.75	2-1/4"
8121	5/8"-18	M14 x 1.5	2-1/4"
8122	5/8"-18	M14 x 2.0	2-1/4"
8123	5/8"-18	M16 x 1.5	2-3/4"
8124	5/8"-18	M16 x 2.0	2-3/4"
8125	5/8"-18	M20 x 1.5	2-3/4"
8126	5/8"-18	M20 x 2.5	2-3/4"
8131	5/8"-18	M6 x 1.0	1-5/8"
8132	5/8"-18	M8 x 1.25	1-5/8"
8133	5/8"-18	M10 x 1.5	1-5/8"
8134	5/8"-18	M12 x 1.75	1-5/8"
8135	5/8"-18	M14 x 2.0	1-5/8"
8136	5/8"-18	M16 x 2.0	1-5/8"
8137	5/8"-18	M20 x 2.5	1-5/8"
8141	1"-14	M16 x 1.5	3"
8142	1"-14	M16 x 2.0	3"
8143	1"-14	M18 x 1.5	3"
8144	1"-14	M20 x 1.5	3"
8145	1"-14	M20 x 2.5	3"


M22 x 1.5

M24 x 2.0 3"

M24 x 3.0 3"

3"

Tool	Internal	External			
No.	End	End	Length		
Standard	Standard Threaded Adapters				
206437	1/2"-20	5/8"-18	2-1/4"		
8000	5/8"-18	1/4"-20	2-1/4"		
8001	5/8"-18	5/16"-18	2-1/4"		
8002	5/8"-18	7/16"-14	2-1/4"		
8003	5/8"-18	7/16"-20	2-1/4"		
8004	5/8"-18	3/8"-24	2-1/4"		
8005	5/8"-18	3/8"-16	2-1/4"		
8006	5/8"-18	1/2"-20	2-1/4"		
8007	5/8"-18	1/2"-13	2-1/4"		
8008	5/8"-18	9/16"-18	2-1/4"		
8009	5/8"-18	9/16"-12	2-1/4"		
8010	5/8"-18	5/8"-11	2-1/4"		
8013	5/8"-18	3/4"-16	2-1/4"		
8015	5/8"-18	3/4"-10	2-1/4"		
8017	5/8"-18	7/8"-14	2-1/4"		
8018	5/8"-18	7/8"-9	2-1/4"		
8019	5/8"-18	1"-14	2-1/4"		
8022	5/8"-18	1/8" pipe	2-1/4"		
8012	1"-14	5/8"-18	3-3/16"		
8011	1"-14	5/8"-11	2-1/2"		
8014	1"-14	3/4"-16	2-1/2"		
8016	1"-14	3/4"-10	2-1/2"		
8020	1"-8	5/8"-18	3"		
8021	1"-8	1"-14	3"		
8023	1-1/4"-12	1"-14	4-1/2"		
8024	1-1/4"-12	1-3/4"-12	4-3/4"		
8025	1-1/4"-7	5/8"-18	4"		
8027	1-1/4"-7	1"-14	4"		
8029	1-5/8"-51/2	1"-14	4"		
8028	1-5/8"-51/2	1"-8	4"		
8030	3/4"-16	5/8"-18	2-1/4"		

 

8044 **Internal Threaded Adapter Set**

For use on the ends of Push-Puller legs or forcing screws to aid in the removal and installation of shafts, axles, and housings.

Tool No.	Internal End "A"	Internal End "B"
8035*	1/2"-20	5/8"-18
8036*	1"-14	1"-14
8037	5/8"-18	5/8"-18
8038	5/8"-18	3/4"-16
8039	5/8"-18	7/8"-14
8040	5/8"-18	1"-14
8041	5/8"-18	1-1/8"-12
8042	5/8"-18	1-1/4"-12
8043*	5/8"-18	1-1/2"-12

* Not included in set No. 8044. Order separately. All adapters are available separately.







8056 **Shaft Protector Set**

Designed to protect shaft centers from distortion when extreme pressures are applied with either Grip-O-Matic® pullers or Push-Pullers. Shaft protectors are available separately.

Tool No.	"A"	"B"	"C" (60°)	"D" (60°)
8050	1-1/2"	3/4"	3/8"	7/16"
8051	1-1/4"	3/4"	3/8"	3/8"
8052	1"	3/4"	3/8"	5/16"
8053	3/4"	3/4"	1/4"	1/4"
8054	5/8"	5/8"	1/4"	1/4"
8055	5/8"	5/8"	3/16"	3/16"



8145 8146

8147 8148 1"-14

1"-14

1"-14